


# Assembly Instructions

## Moselle 3 Drawer Bed 910 x 2000mm


1/4

Part in Box 1

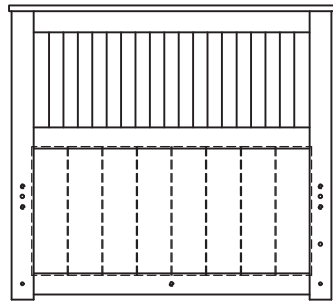


(A) Hb. Panel x 1

Part in Box 2

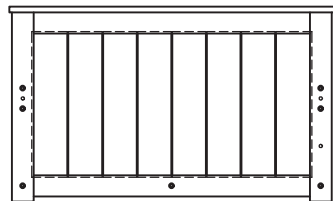


(B) Fb. Panel x 1


Part in Box 3

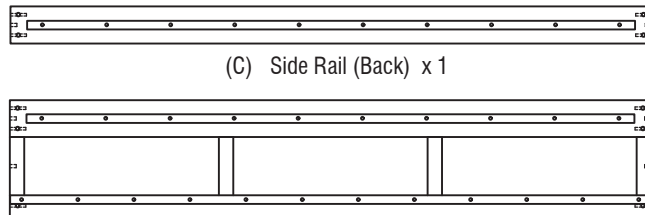

(C) Side Rail (Back) x 1

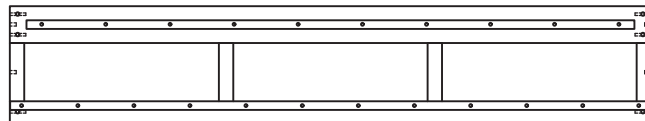


(D) Side Rail (Front) x 1




(E) Center Support x 1

Part in Box 4

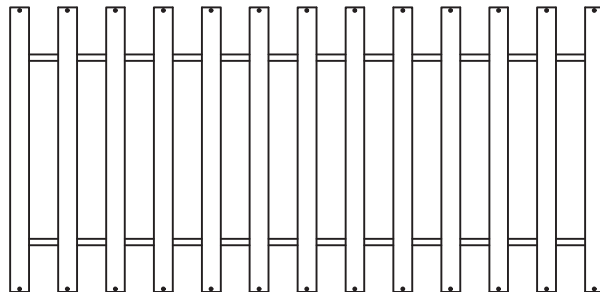

(N) Set of Slats x 1

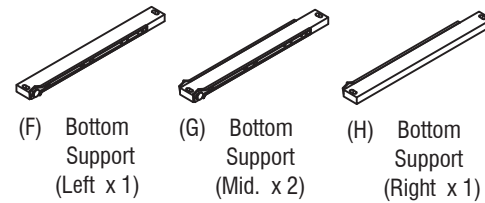

(F) Bottom Support (Left x 1)

(G) Bottom Support (Mid. x 2)

(H) Bottom Support (Right x 1)



(I) Drawer Front Panel x 3




(J) Drawer Back Panel x 3




(K) Drawer Side Panel x 6



(L) Drawer Bottom Panel x 3



(M) Drawer Bottom Support x 3

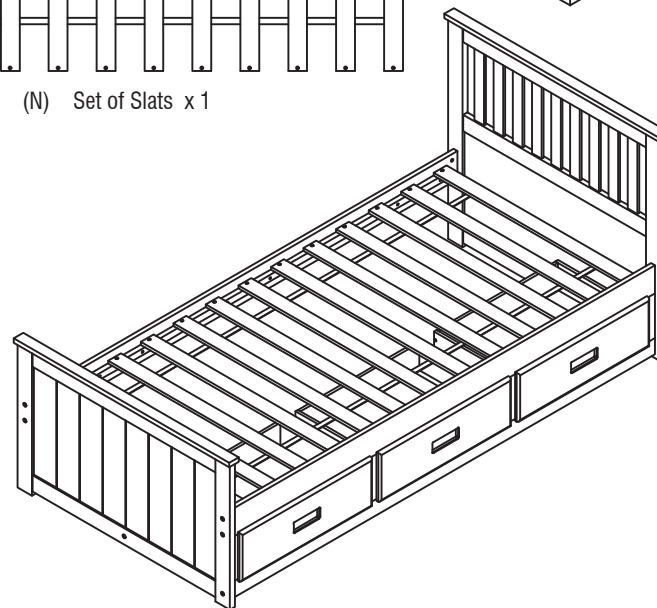

### Hardware List

1.	JCBC M6 x 35mm		x 8
2.	JCBC M6 x 70mm		x 10
3.	JCBC M6 x 60mm		x 2
4.	M6 x 15mm Barrel Nut		x 12
5.	Wood Dowel M10 x 30mm		x 6
6.	CSK Screw M4 x 25mm		x 38
7.	Minifix Housing (Short)		x 18
8.	Connecting Bolt (Short)		x 18
9.	Cover Cap		x 2
10.	M4 Allen Key		x 1

Tool required for assembly :

- \* Allen Key ( supplied )
- \* Phillips Screwdriver ( not supplied )

# Assembly Instructions


## Moselle 3 Drawer Bed 910 x 2000mm

2/4

1

Attach all the Bottom Support (F,G & H) to the center Support (E).


1.	JCBC M6 x 35mm		x 4
----	-------------------	---	-----

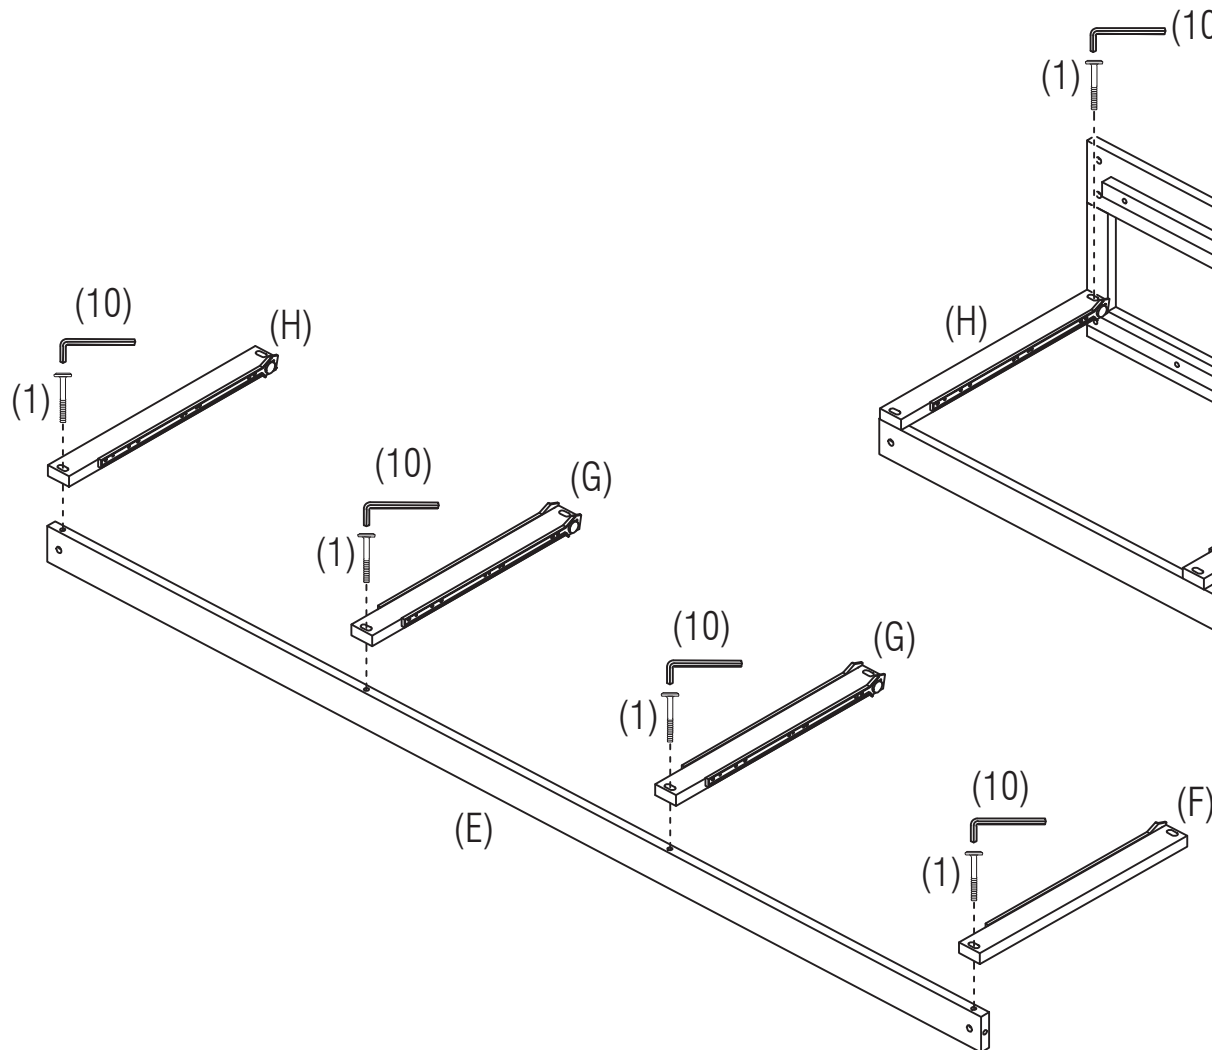

2

Tighten the Bottom Support (F,G & H) to the Front Panel (D).

1.	JCBC M6 x 35mm		x 4
----	-------------------	---	-----

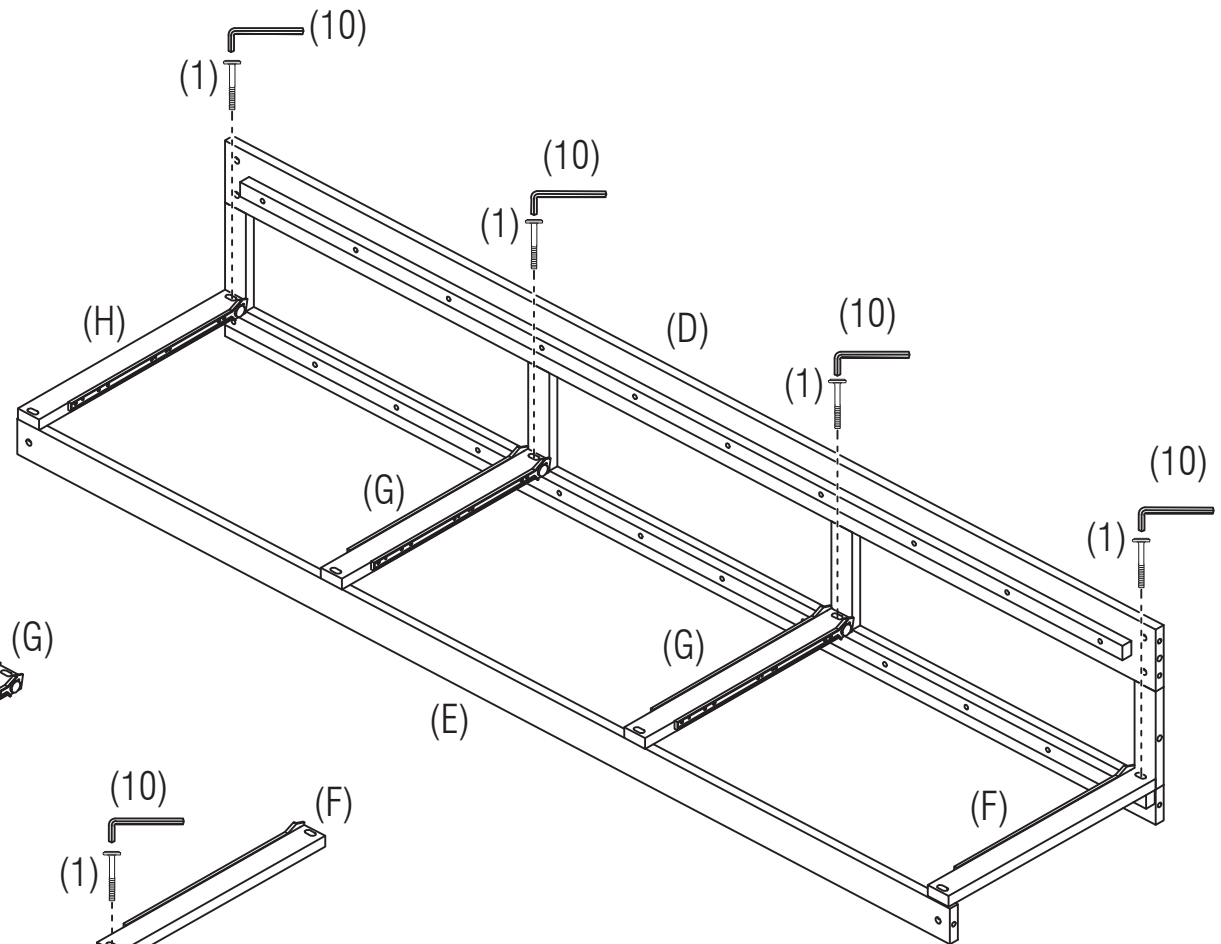





# Assembly Instructions

## Moselle 3 Drawer Bed 910 x 2000mm

3/4

3


Attach the Side Rail (C & D) to the Hb. Panel (A) & Fb. Panel (B).

2.	JCBC M6 x 70mm		x 10
3.	JCBC M6 x 60mm		x 2
4.	M6 x 15mm Barrel Nut		x 12
5.	Wood Dowel M10 x 30mm		x 6

4

Fit the Slats (N) in the place.

6.	CSK Screw M4 x 25mm		x 26
----	------------------------	---	------

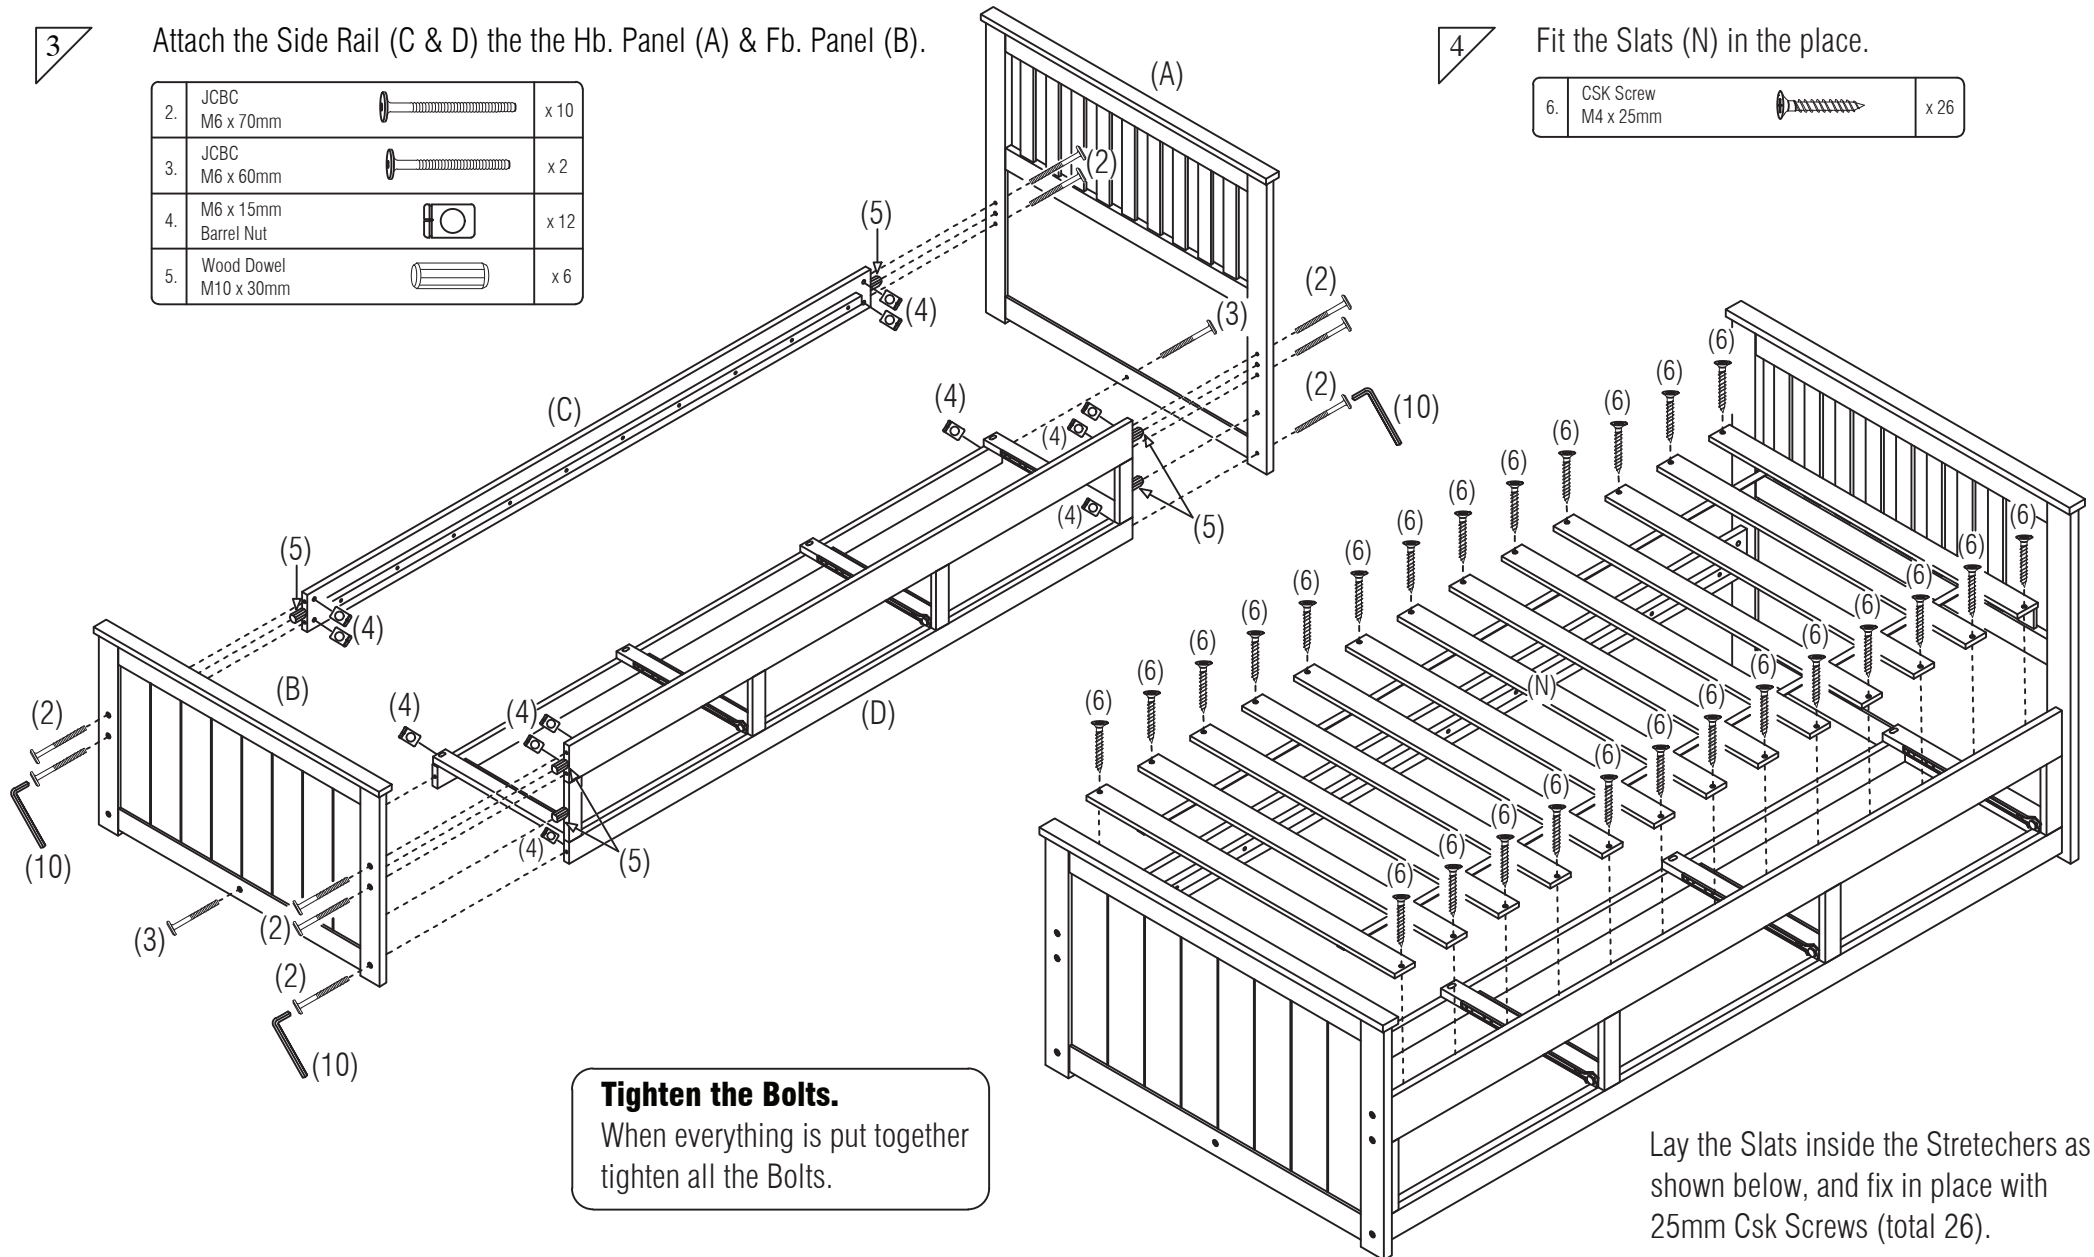




# Assembly Instructions

## Moselle 3 Drawer Bed 910 x 2000mm


4/4

5 Fit the Drawer Side Panel (K) and Drawer Bottom Support (M) onto Drawer Face (I).

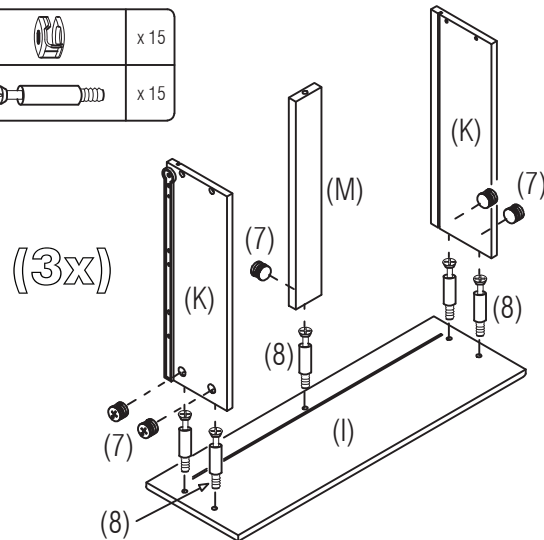

7.	Minifix Housing (Short)		x 15
8.	Connecting Bolt (Short)		x 15

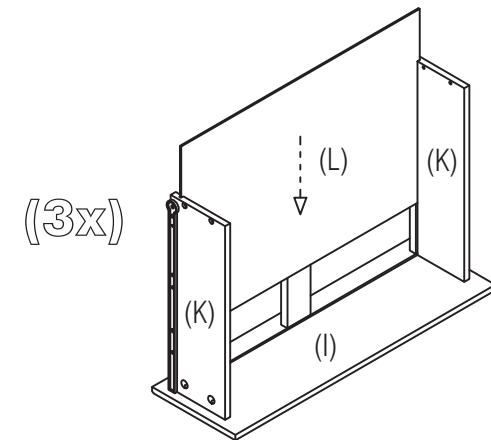


6 Fit the Drawer Bottom Panel (L) in the place.




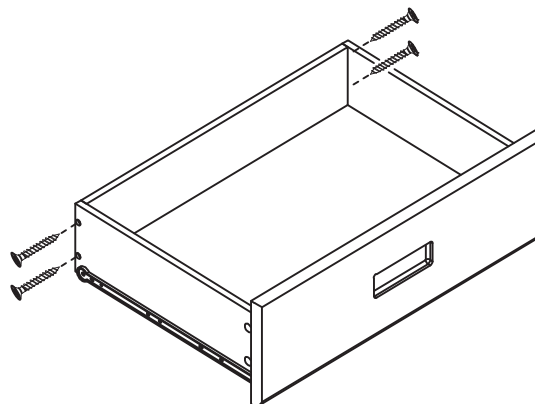
7 Fit the Back Panel (J).

7.	Minifix Housing		x 3
8.	Connecting Bolt (Short)		x 3

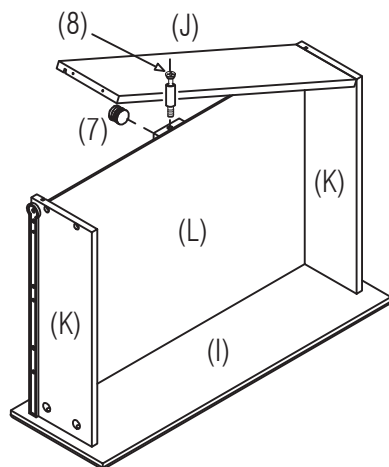


8 Secure the Drawer Back Panel (J) with Csk Screw (6) as Shown.

6.	CSK Screw M4 x 25mm		x 12
----	---------------------	---	------



9 Insert the assembled Drawers.

9.	Cover Cap		x 2
----	-----------	---	-----

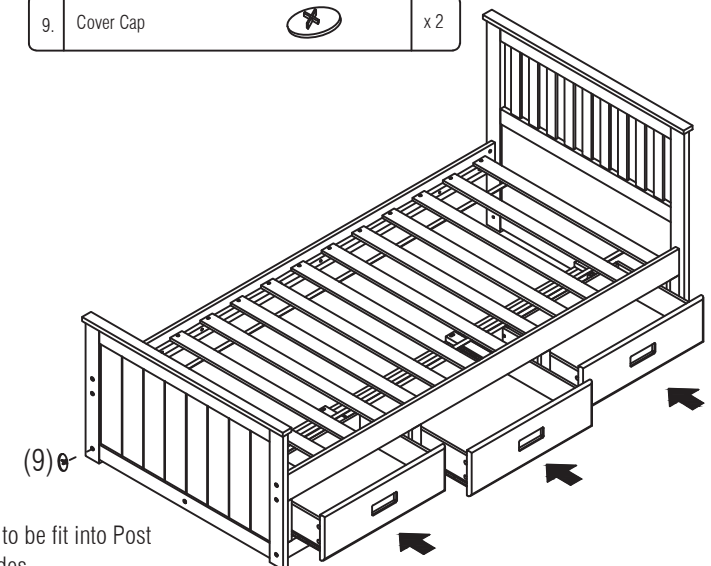

Remark \*\*\*  
Plastic Cover to be fit into Post  
for unused sides.